


Maintenance

Folding cleat. Aluminium / Stainless steel

Folding cleat: B120, B175, B240, B320, B400, B175X, B240X, B320X, B400X, B500X, BE175X, BE240X.

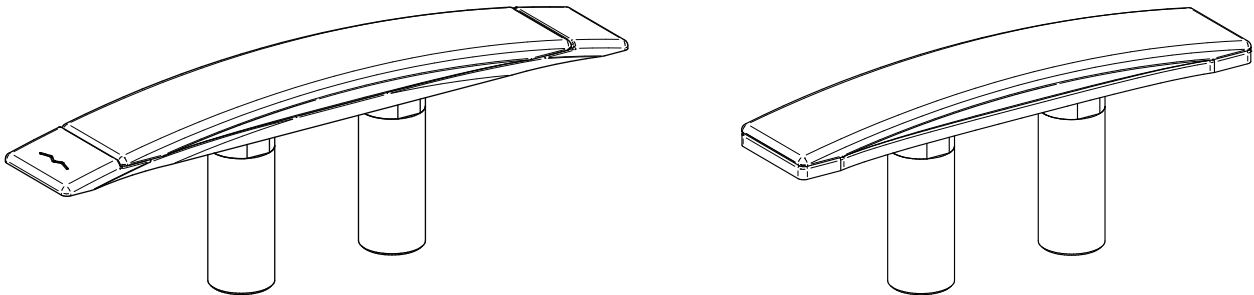

Clean with direct fresh water. When using soap, be sure to use mild dishwashing liquid and to rinse thoroughly.

TO DO EVERY WEEK !



Fresh water



Soap




Fresh water

Grease regularly the lifting parts with silicone grease.
 Don't use other types of lubricants, they may damage the anodization and the O-rings.
 Never use abrasive cleaning products.
 Never use steel or brass wool, polishing wheels or polishing compounds (on aluminium parts).

TO DO EVERY 6 MONTHS !



Silicone grease

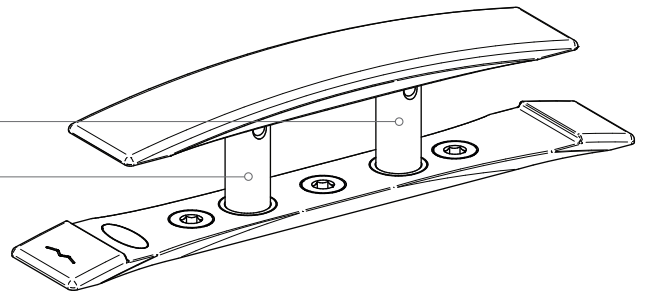

Maintenance

Folding cleat. Aluminium / Stainless steel

To replace the parts highlighted in the drawing below (piston, cylinder and cap) in case of wear and / or damage, order the codes indicated in the following table:

Type	Replacement parts code
B120	B120-RP-02
B175	B175-RP-02
B240	B240-RP-02
B320	B320-RP-02
B400	B400-RP-02
B175X / BE175X	B175X-RP-02
B240X / BE240X	B240X-RP-02
B320X	B320X-RP-02
B400X	B400X-RP-02
B500X	B500X-RP-02

