Maintenance

Cam Latch. Aluminium / Stainless steel

Cam Latch: LH50, LH70, LH50X, LH70X, LH70K, LH70XK.

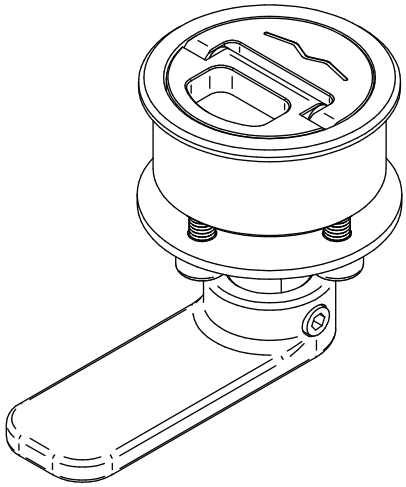

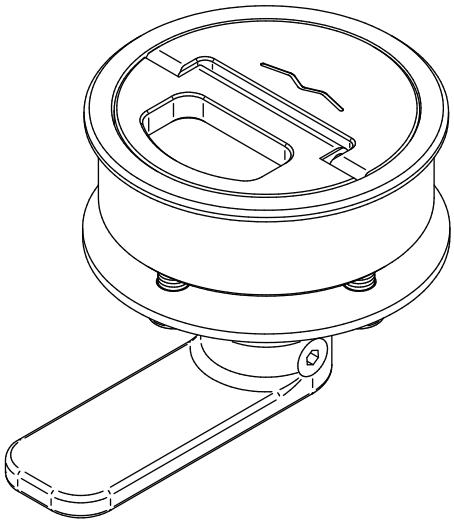

Clean with direct fresh water. When using soap, be sure to use mild dishwashing liquid and to rinse thoroughly.

TO DO EVERY WEEK !

Fresh water › Soap › Fresh water

Grease regularly the lifting parts with silicone grease.
Don't use other types of lubricants, they may damage the anodization and the O-rings.
Never use abrasive cleaning products.
Never use steel or brass wool, polishing wheels or polishing compounds (on aluminium parts).

TO DO EVERY 6 MONTHS !
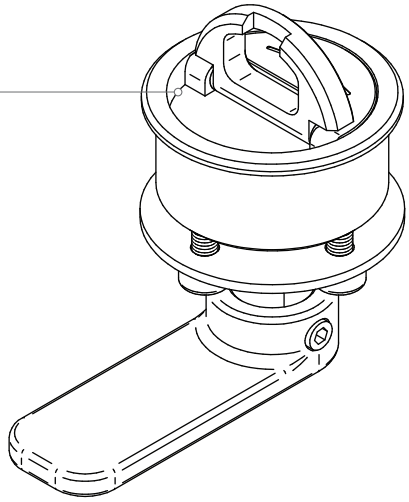
Silicone grease