User guide

Awning post

STANDARD POLES: AW40 13, AW40 14, AW40 15, AW40 16, AW40 17, AW60 14, AW60 16, AW60 17, AW60 18, AW60 19, AW60 20, AW80.
TELESCOPIC POLES: AW40T, AW60T, AW80T.
AWNING POST BASE: AWB40, AWB40X, AWB60, AWB60X, AWB60AX, AWB80X, AWB80, AWB100.

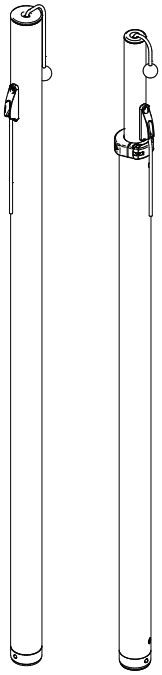

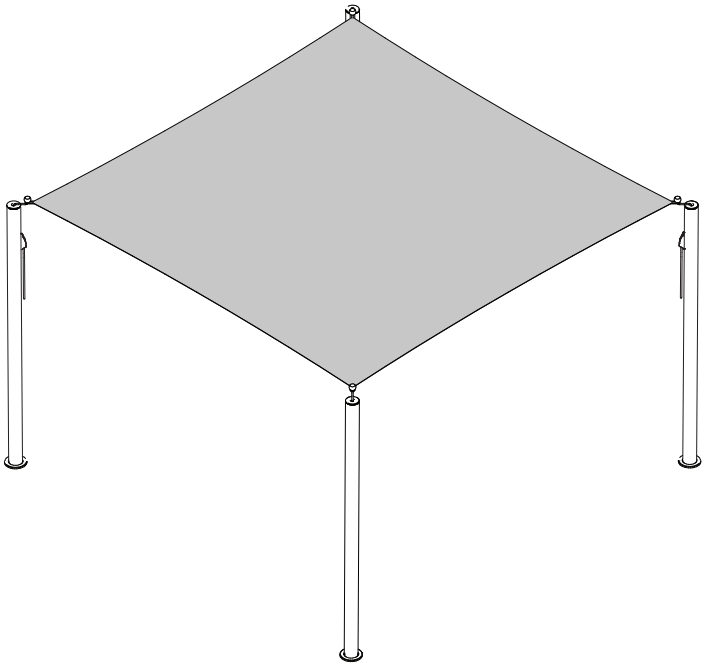

1. INSTALLATION .

Push the button and catch the cap to remove it,
then insert the pole into the socket.

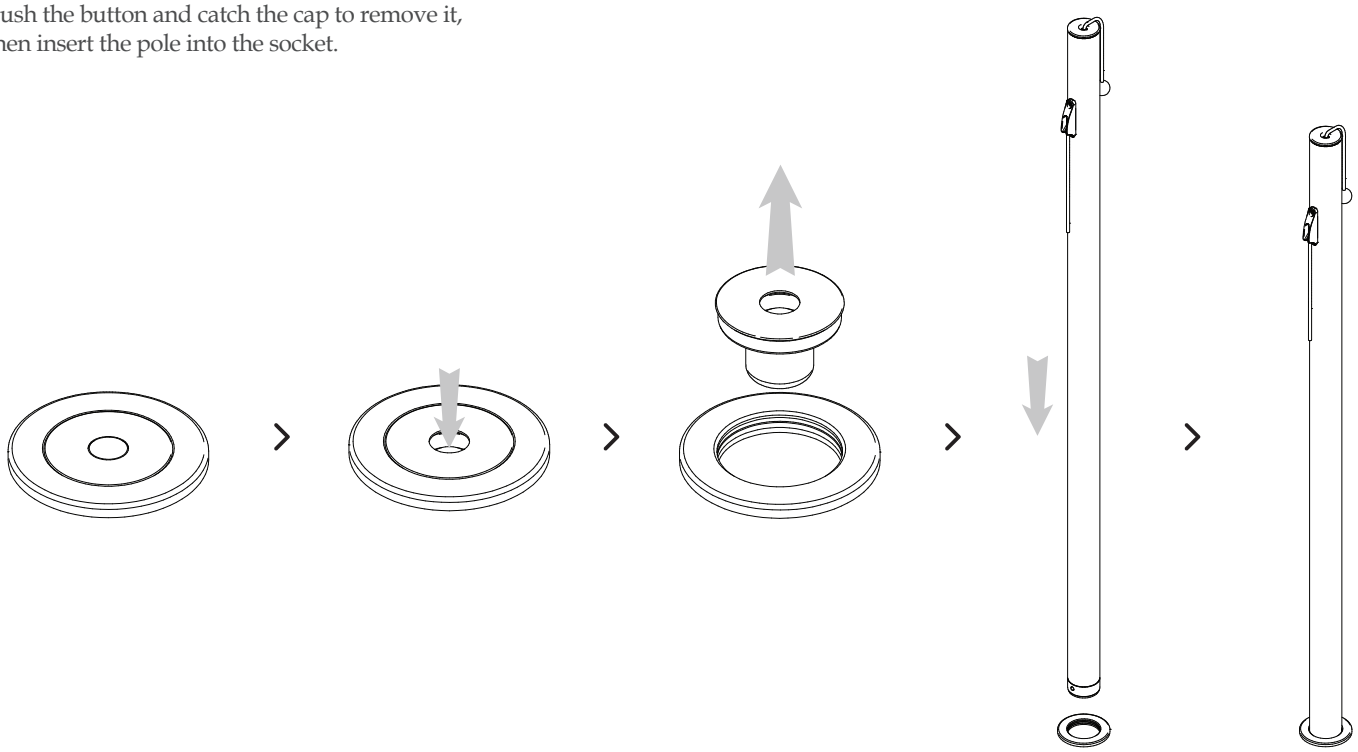

User guide

Awning pole

2.1. AWNING INSTALLATION

(1) Connect the line to the hook on the corner of the awning.

(2) Pull the line to tighten the awning.

(3) Lock the line in the cam cleat. In this setting all the standard poles are locked in the base (see pag. 03).

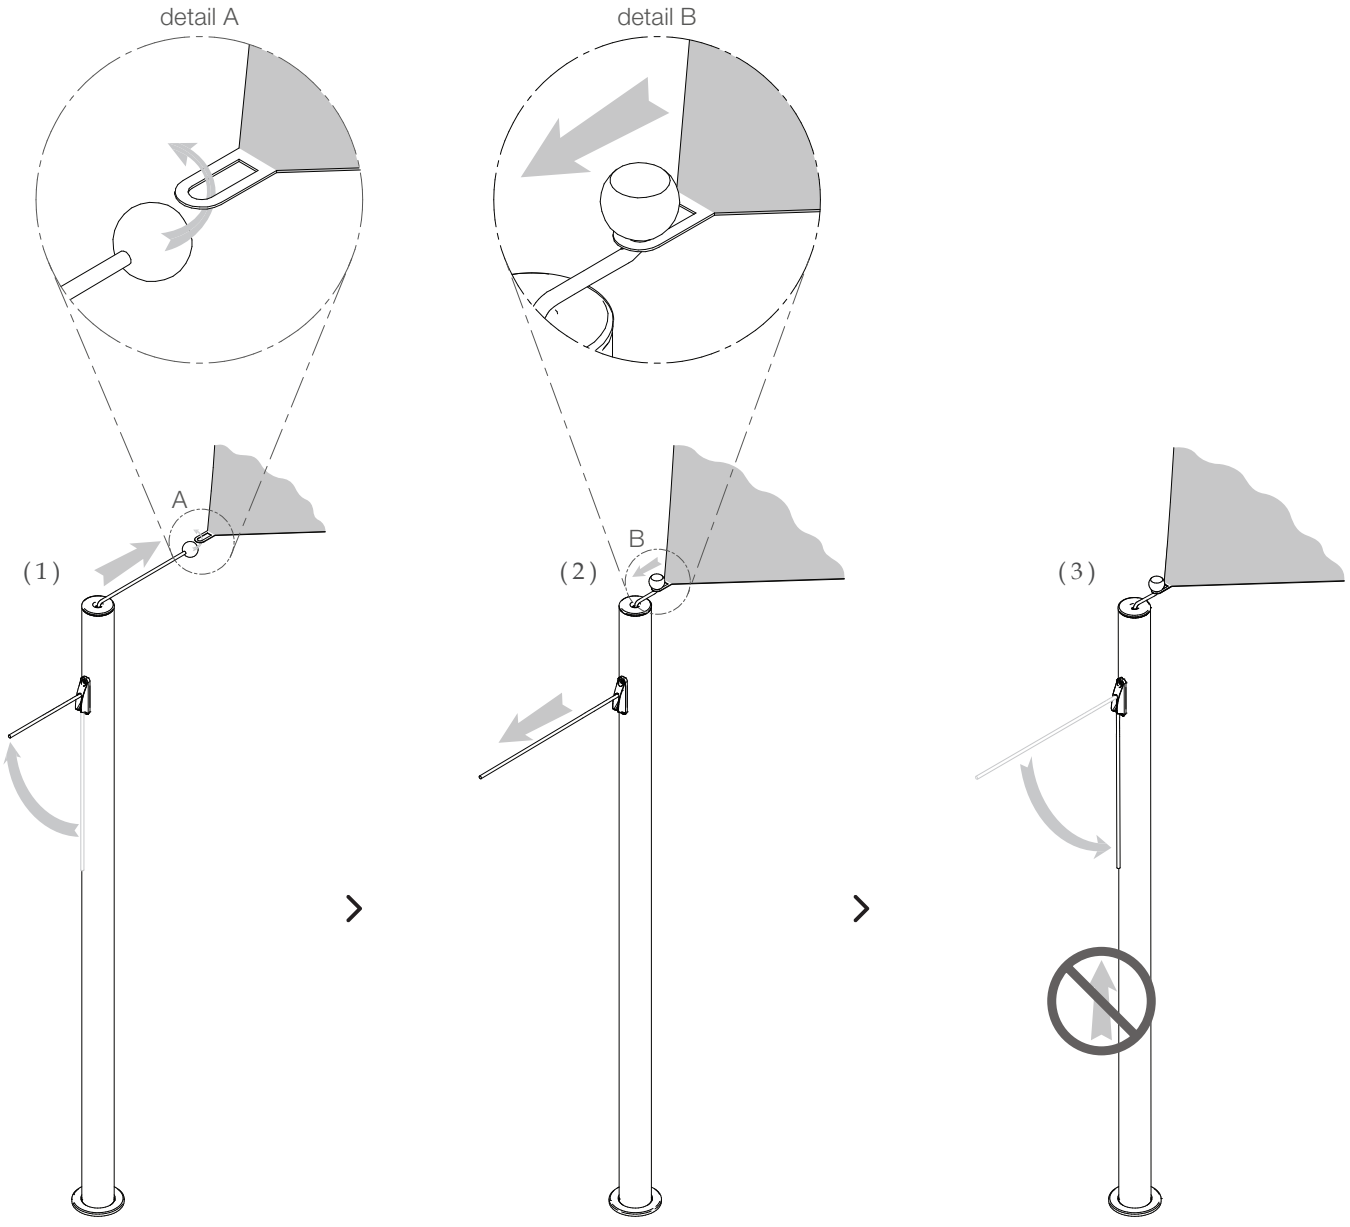

User guide

Awning pole

2.2. LOCK THE POLE WITHOUT AWNING (NOT FOR TELESCOPIC).

Pull the line till the end, to lock the pole inside its socket. However, the pole will always be able to rotate.

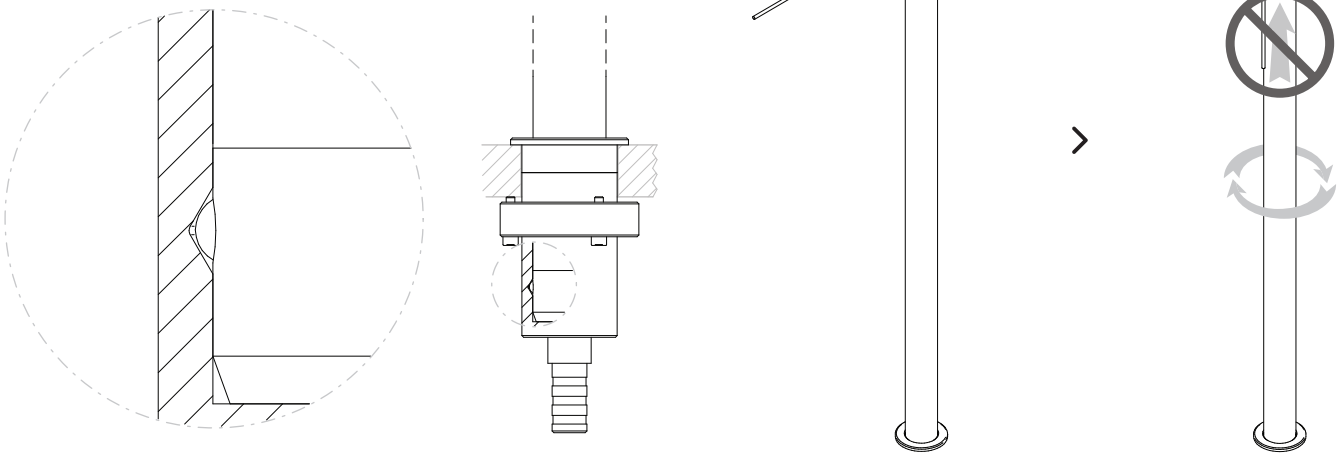

2.3. UNLOCK THE POLE (NOT FOR TELESCOPIC).

Unlock the line and keep it loose, to unlock the pole and remove it.

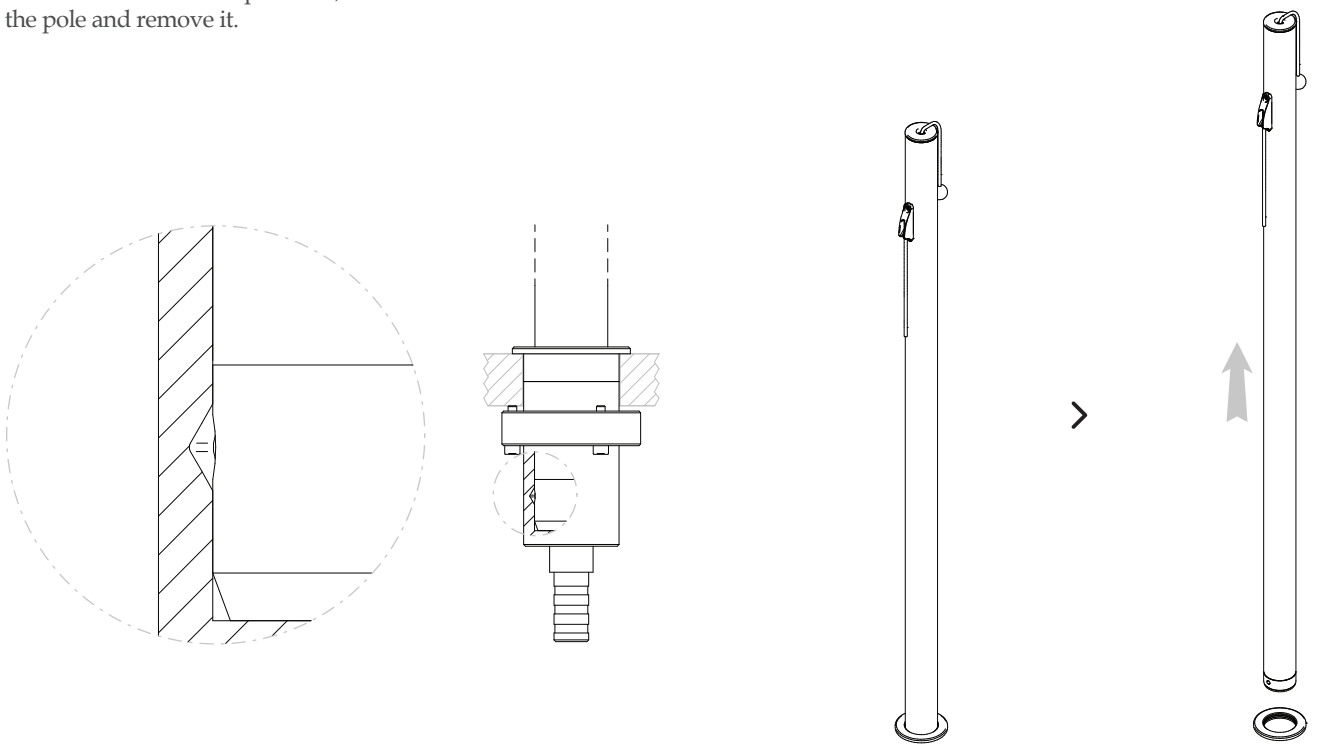

User guide

Awning pole
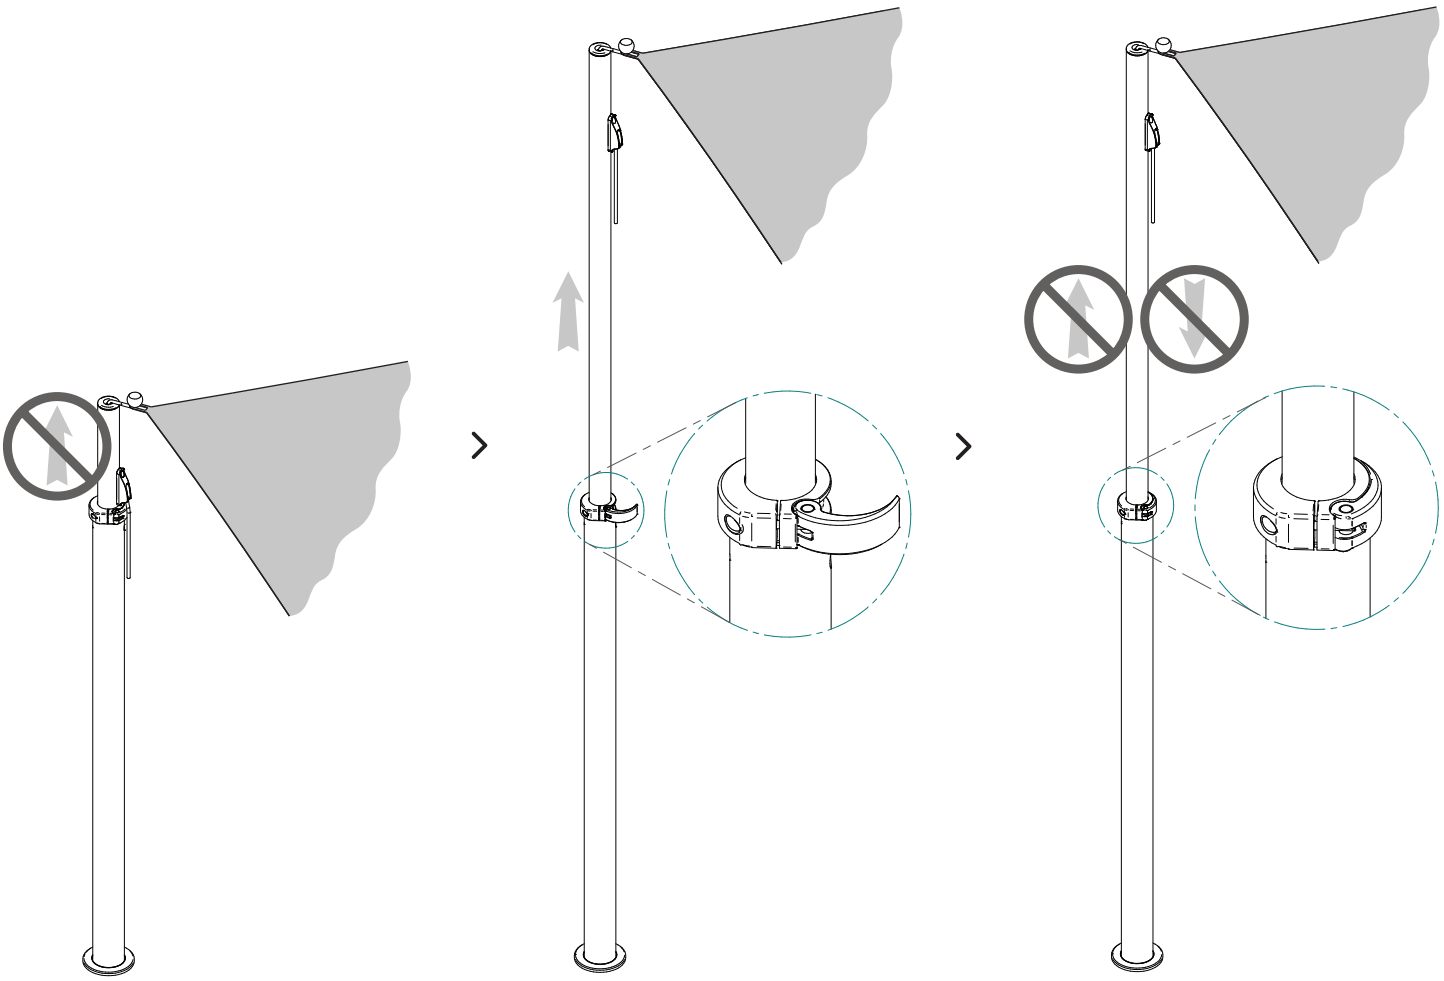
5. ADJUST THE HEIGHT (ONLY FOR TELESCOPIC)
Open the integrated clasp to unlock the height adjusting, and closing for lock it.