Installation instruction

Cam Latch. Aluminium / Stainless steel

Cam Latch: LH50, LH70, LH50X, LH70X, LH50K, LH50XK, LH70K, LH70XK.
Extension Cam: LH010

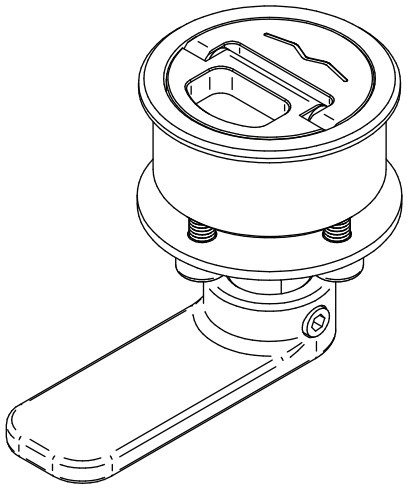

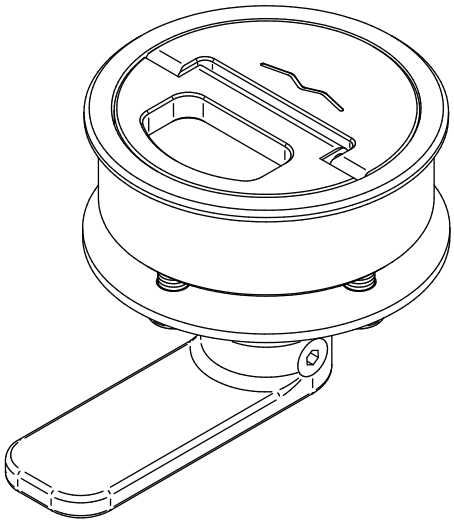

CAUTION. Read all instructions carefully before installing and using this product.

1. REQUIRED FOR INSTALLATION.

- Template
- Hole saw
- Non acidic degreaser
- Polyurethane marine sealant
- Anti-corrosion lubricant
- Threadlocker

Installation instruction

Cam Latch. Aluminium / Stainless steel

1. TEMPLATE AND DRILLING.
Mark the hole, and use a hole saw to cut hole.

Type		T min	T max
LH50 / LH50X / LH50K / LH50XK	Ø 45 mm	20 mm	35 mm
LH70 / LH70X / LH70K / LH70XK	Ø 65 mm	20 mm	35 mm

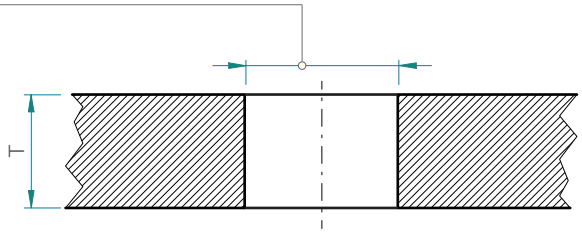

2. PREPARING THE LATCH.
Carefully clean the latch with a non-acidic degreaser.
Then apply a small bead of marine sealant.

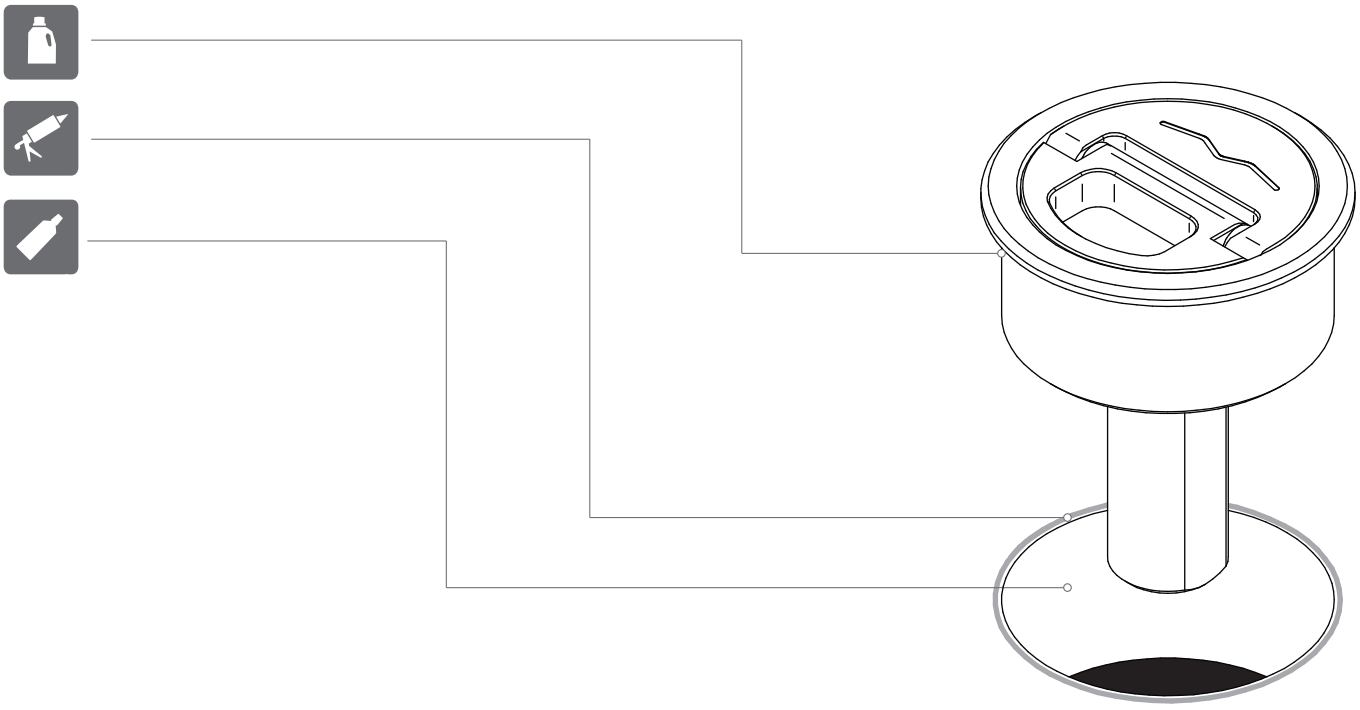

Installation instruction

Cam Latch. Aluminium / Stainless steel

3. FITTING

Place the latch into the deck, then place its backing plate and screw (we recommend touse anti-corrosion lubricant into the screw holes). Tighten firmly the screws.

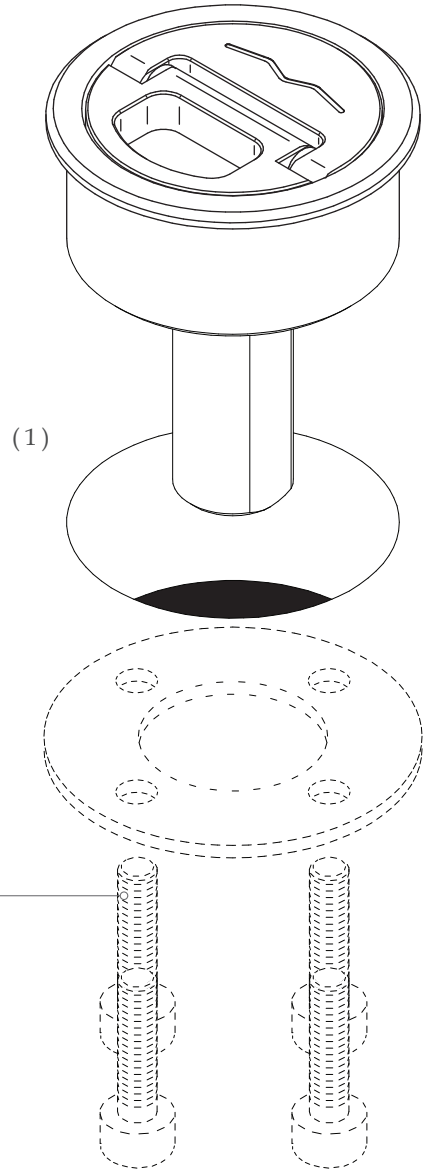

(1)

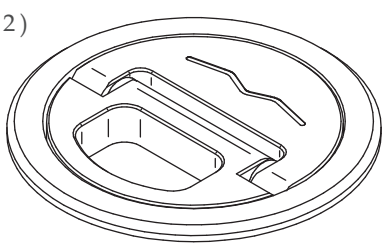

(2)

Installation instruction

Cam Latch. Aluminium / Stainless steel

4.1. INSTALLATION WITH STANDARD CAM

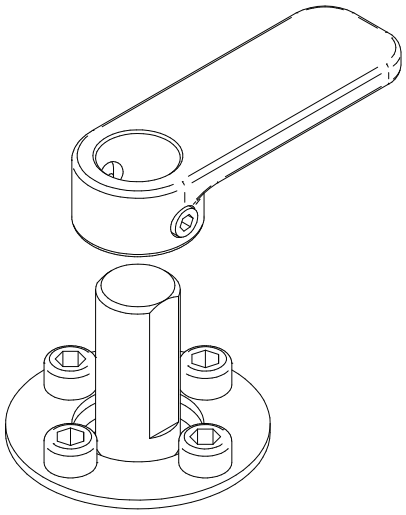

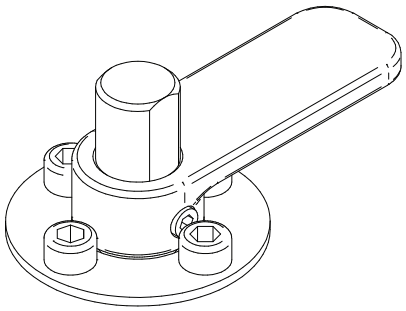

E min	E max
30 mm	54 mm

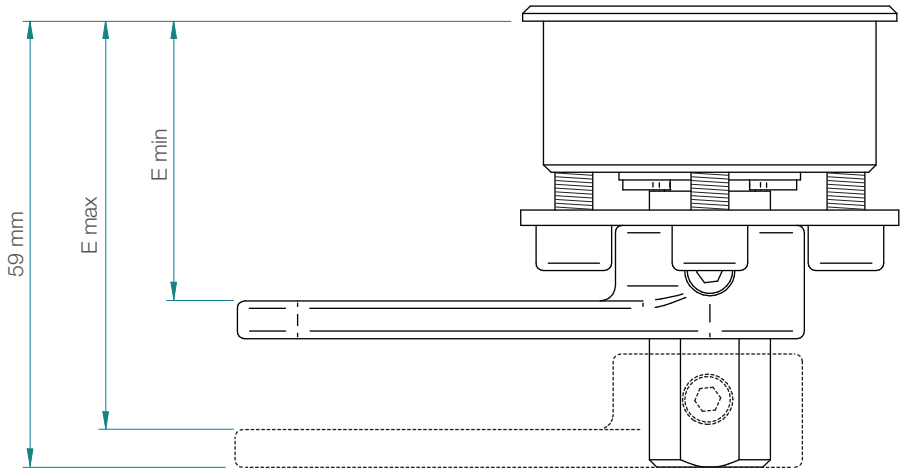

Installation instruction

Cam Latch. Aluminium / Stainless steel

4.2. INSTALLATION WITH EXTENSION CAM (LH010)

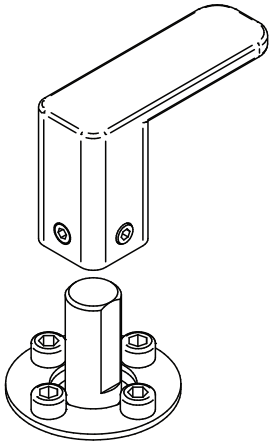

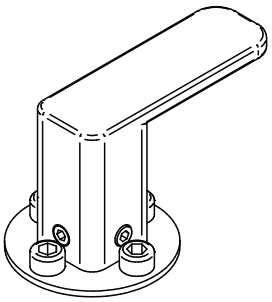

E min	E max
67 mm	85 mm

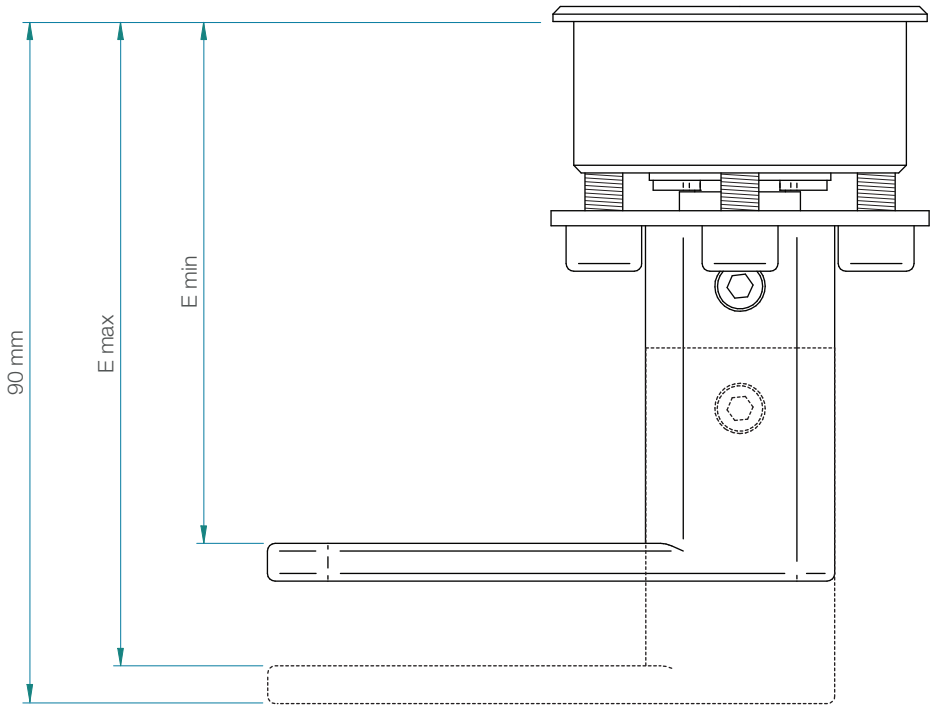

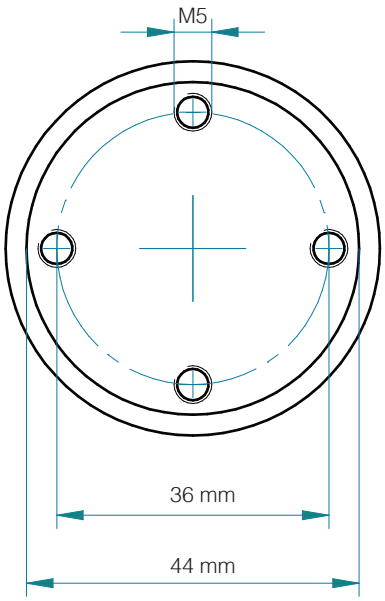

LH50
LH50X

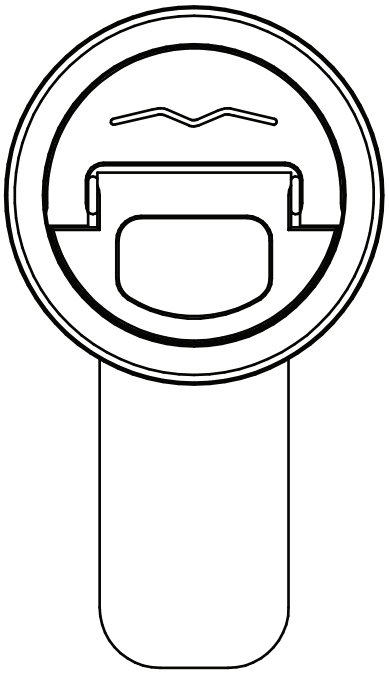

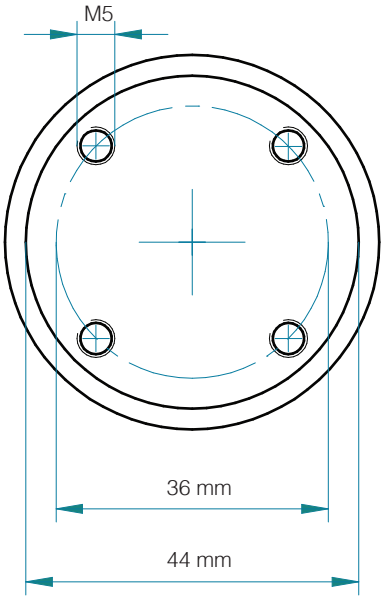

LH50K
LH50XK

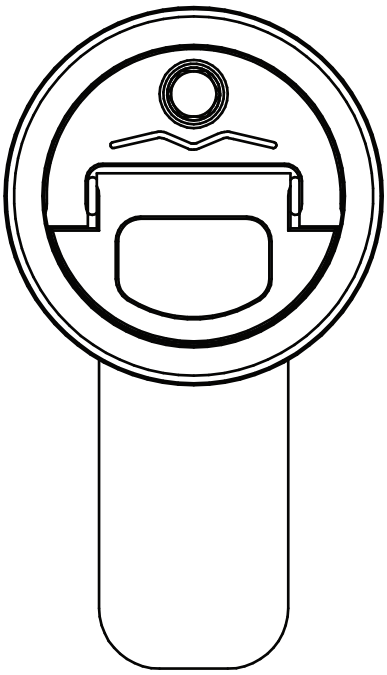

LH70
LH70X

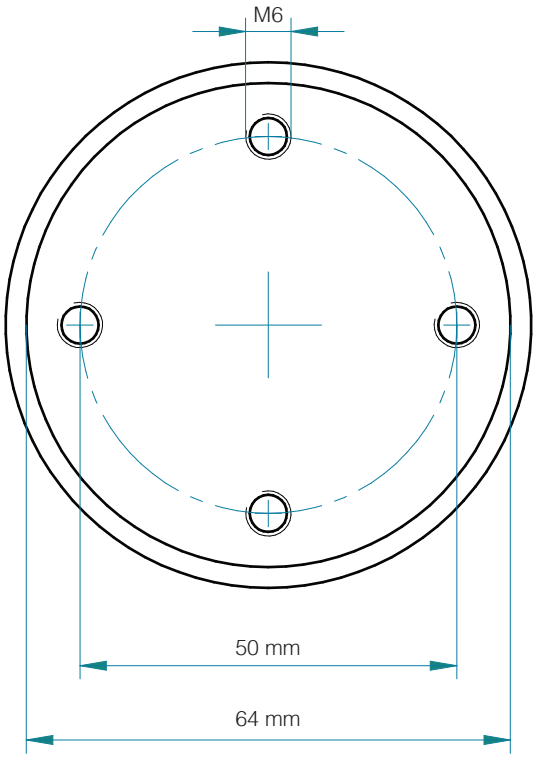

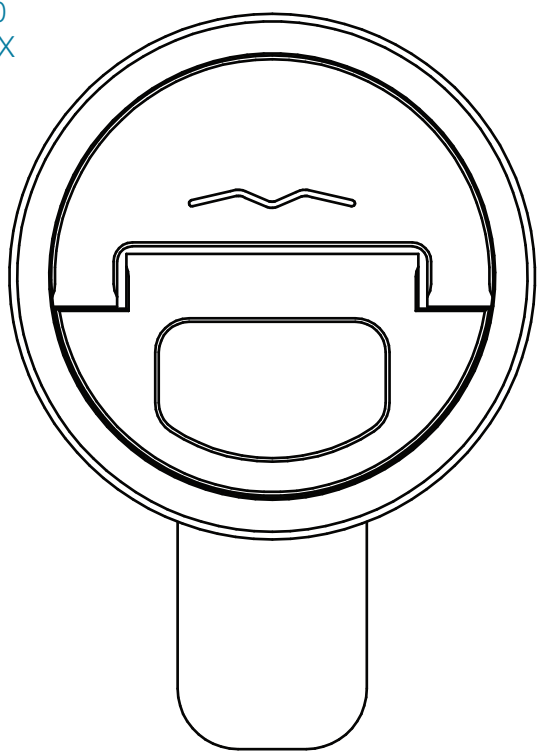
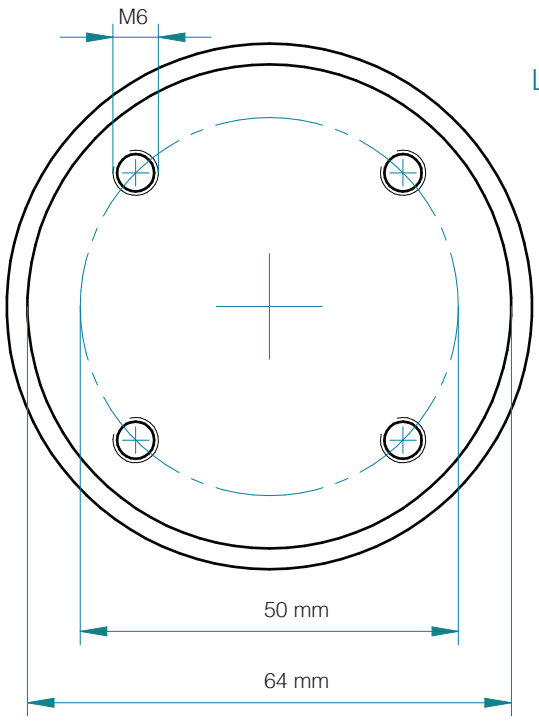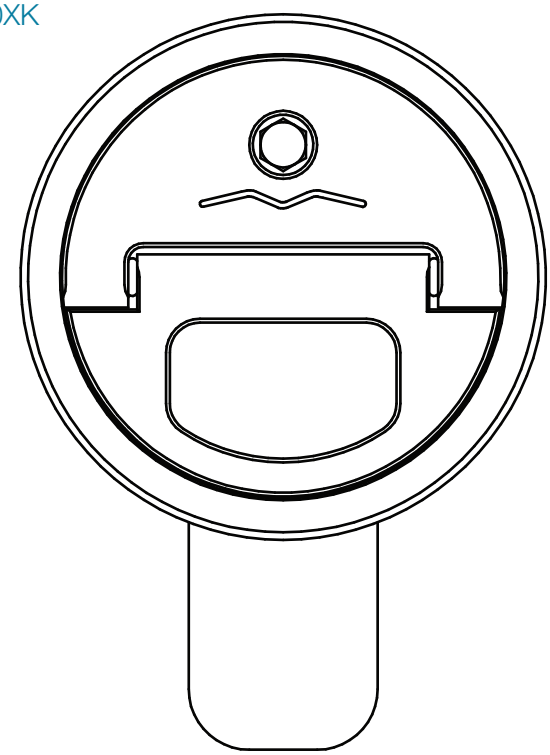
LH70K
LH70XK