# User guide

*Lockable Cam Latch. Aluminium / Stainless steel*

Cam Latch: LH50K, LH50XK, LH70K, LH70XK.
Key: LH KEY.

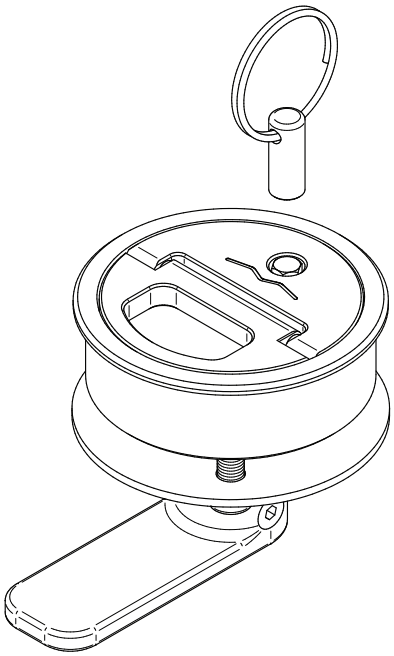

**1. LOCKING .**
Turn the key 90 °clockwise to lock the cam latches.

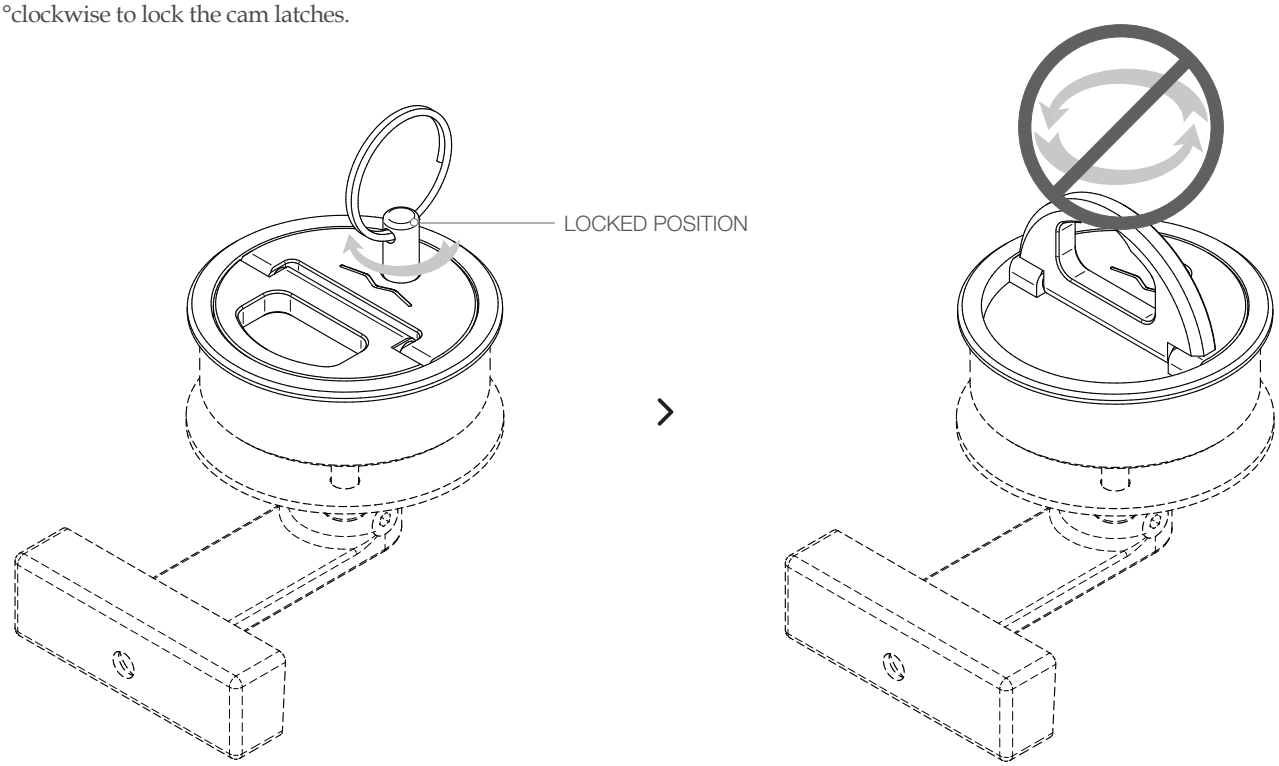

# Installation instruction

*Lockable Cam Latch. Aluminium / Stainless steel*
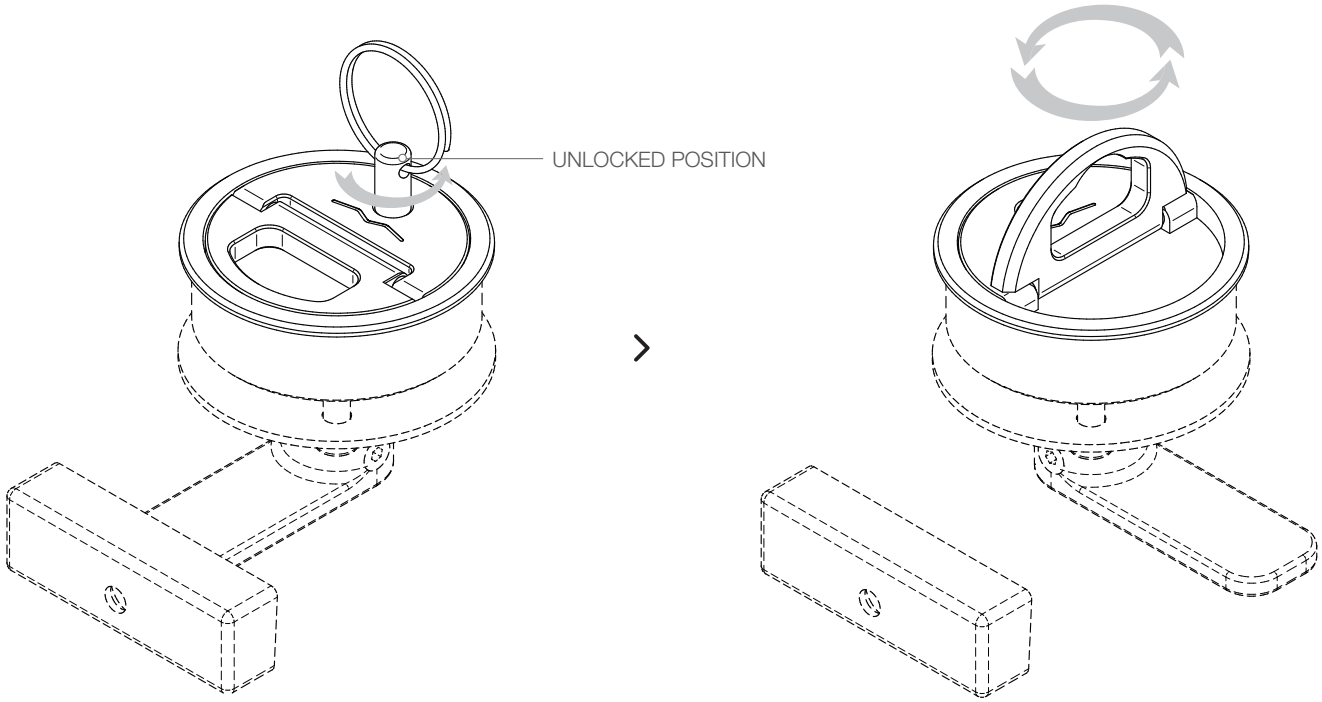
**2. UNLOCKING .**
Turn the key 90 ° counterclockwise to unlock the cam latches.